Dr.Wong

「秋日庭院」香薰機

Aroma Diffuser - Courtyard in Fall

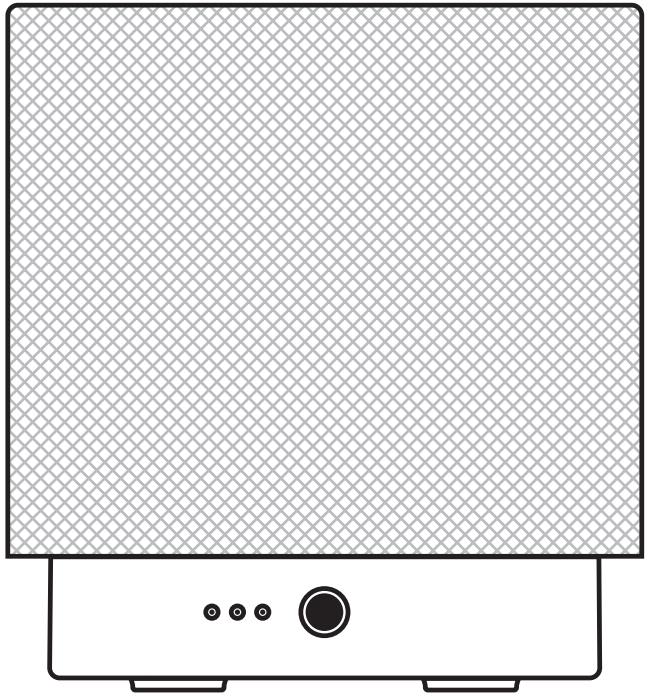

在正式使用產品前，我們建議您先完整閱讀本手冊，以更好使用產品。並請保管好本手冊，以便後續查詢。

產品描述

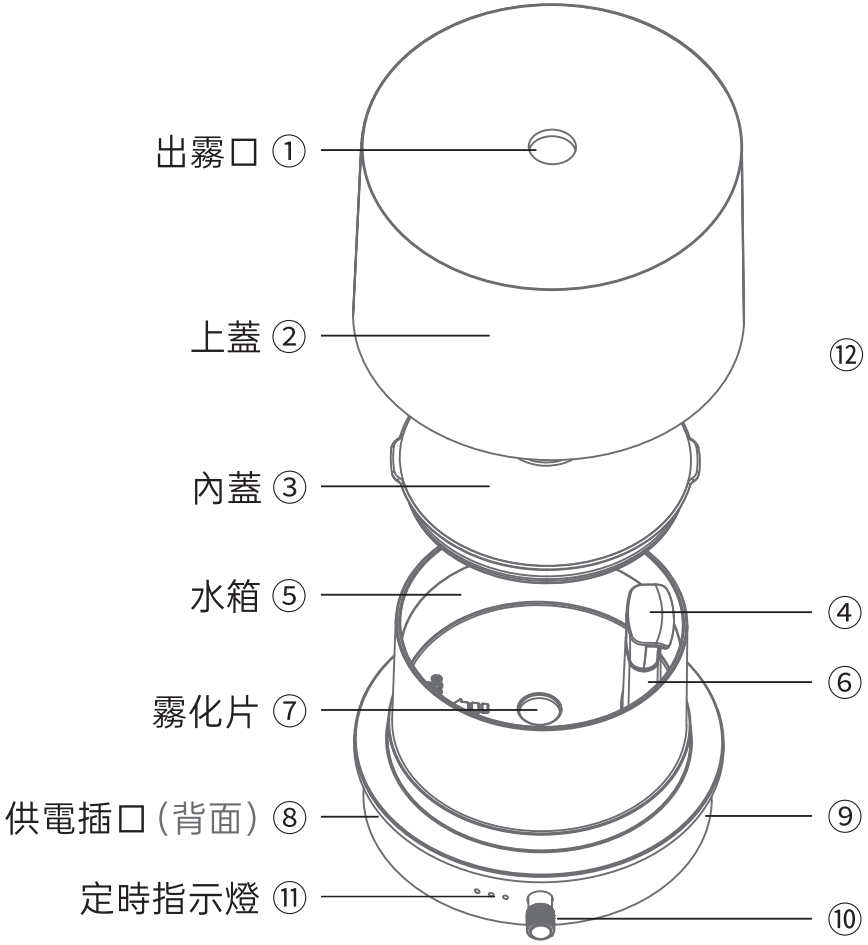



Type-C電源線

出風蓋

出風口

底座

霧/燈光按鈕

使用方法



01

將Type-C電源線插入機身插孔，另一端插入USB插座*，接通電源供電

*本機不帶USB插座，需自備。

02

取下上蓋及內蓋



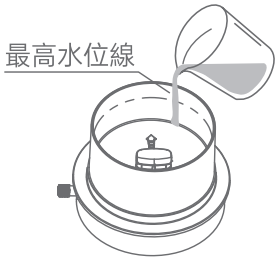

03

加入自來水 / 純淨水 / 礦泉水，請勿超過最高水位線*

*加水位置請避開出風口，以免影響空氣循環。



04

根據個人喜好，往水中滴入6-8滴天然植物精油*

*推薦使用「Dr.Wong®」品牌精油。

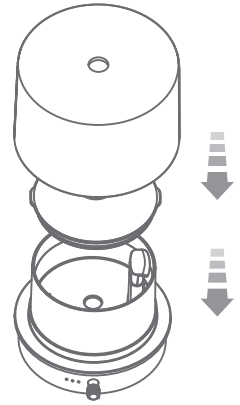

05

蓋回內蓋及上蓋，按下控制鍵，選擇需要的工作模式

按鍵說明

定時出霧模式

第一次按 常開	● ● ●
第二次按 1小時出霧	● ○ ○
第三次按 3小時出霧	○ ● ○
第四次按 5小時出霧	○ ○ ●
第五次按 出霧關閉	○ ○ ○

長按2秒 指示燈閃爍
間歇出霧模式[1]

[1] 本機有兩檔出霧模式可供切換:常出霧模式與間歇出霧模式。在間歇出霧狀態下，出霧狀態以30秒開+30秒關方式一直循環。長按出霧按鈕2秒後，指示燈閃爍，此時出霧模式切換成功。

出霧模式切換可在任何定時狀態下進行，不影響已設置的定時時長。



燈光模式

順時針旋轉 開燈、調亮	
逆時針旋轉 調暗、關燈	
按住同時旋轉 激活/關閉安睡燈[2] 指示燈依次閃爍	

---

[2] 安睡燈功能開啟之後，暖黃光線會在30分鐘後關閉。要激活安睡燈功能，請長按出霧按鈕並順時針或逆時針旋轉旋鈕，3顆指示燈會依次閃爍亮起後關閉，此時安睡燈功能激活。

注意：要退出安睡燈模式，請按住出霧按鈕並順時針或逆時針旋轉旋鈕，此時安睡燈會直接退出。

溫馨提示

○ 出霧工作的狀態下，如果水量過少，香薰機會激活自動關機功能。此時出霧和燈光功能會較原先設定的關閉時間更早關閉。

○ 水箱無水的狀態下，出霧功能無法開啟。

○ 在同等水量下，水溫、室溫和濕度都會對出霧時間有不同程度的輕微影響。

○ 根據水溫和水質的不同，香薰機在剛開始工作的狀態下出霧量會有輕微差異。

○ 根據精油品類、溫度、濕度與擴香面積的差異,各人能感受到的香氣程度會有差異。

○ 請絕對避免在進風口方向傾倒。





清潔保養

日常使用過程中，建議保持每兩週1次的保養。

○ 用棉籤或者柔軟的濕布輕輕擦拭水箱底部的霧化片，去除霧化片周圍的沉積物。您也可根據實際使用情況，自行調整保養的頻率。

○ 請避免用過大的力量擦拭霧化片，切勿使用尖銳物體擦拭，否則影響機器出霧功能。

○ 請在保養之前保證電源已經斷開。在不使用香薰機的時候，確保水箱清理乾淨。

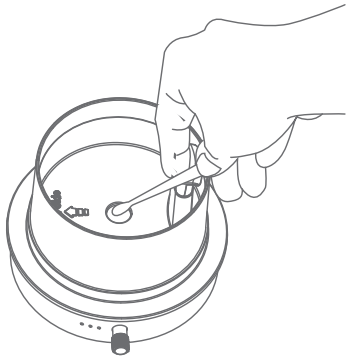

⚠ 意外進水

在使用過程中，如果產品意外傾倒，水可能會從水箱內的出風口進入產品

此時請按以下方式處理：

1. 拔掉電源線。
2. 將水箱內剩餘水完全倒出（勿從出風口側倒出，以免水進入主機）。
3. 將產品往排水孔傾斜，將底座內積水從排水孔排出。
4. 將產品放置在乾燥位置，自然風乾24小時。

為避免產品進水，請注意以下幾點：

○ 使用水杯加水。

○ 加水後不要劇烈搖晃產品。

○ 盡量不要在加水後移動產品。

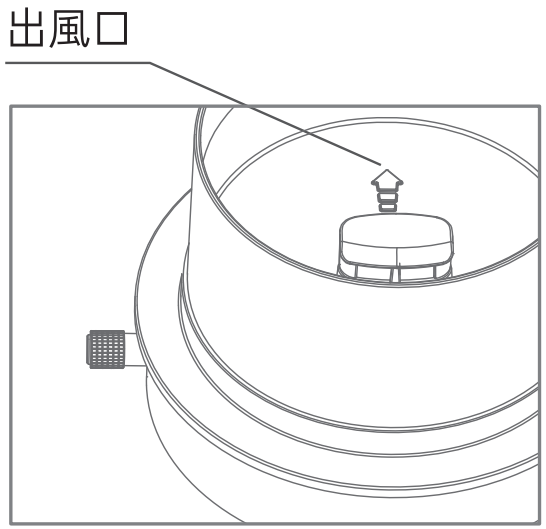

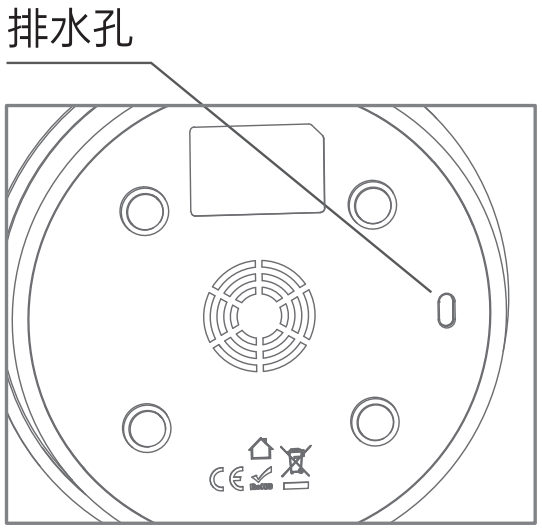

⚠ 注意事项

○ 請勿扭曲、大力拉伸電源線，損壞電源線可能造成短路以及斷路易引發觸電、火災事故。

○ 當水箱沒水時，機器將啟動安全保護設置，停止工作，燈光熄滅。

○ 如果出現異味，噪音，非正常發熱，則說明香薰機或適配器有了請迅速將適配器插頭從電源插座上拔出，同時停止使用。

○ 請勿使用溫度超過 55℃的熱水，以免對霧化片造成損害。

○ 為避免水溢出，在機器工作時，請勿移動、搖晃或傾斜機身。

○ 香薰機只能使用天然植物精油，不可使用香水/香精/人工合成香料不可加入帶有基礎油的複方油等，以免對機器造成損傷。

○ 如長時間不使用，請斷開電源。長時間工作後，應關閉60分鐘後避免超聲波板損壞。

○ 機器使用時放在平滑台面，不宜放在棉布、軟墊上，避免棉絮捲影響出霧。

○ 請將產品放置在兒童及寵物不能接觸到的地方。

○ 請勿靠近高溫，水源，明火，空調，避免陽光直射。

○ 本機發生故障時，切勿自行拆機修理，請聯繫銷售方進行維修。

等情況,

故障,

料，絕

再啟用,

入風扇,

常見問題

常見問題	故障分析原因	解決方法
不通電	電源適配器插入不當	正確插入電源適配器
	電源按鍵未按下	按下電源按鍵
電源接通 但機器不出霧	水箱中沒水或水量太少	水箱中注入足夠的水 （不超過最高水位線）
水箱中有足夠的水 但機器出霧小 或不出霧	霧化片上有汙物	清潔霧化片
	水位超過最高水位線	倒掉過多的水
	出風口被堵塞	清理堵塞物

保修條款

如購買後產品出現使用故障（非人為因素），本公司提供如下售後保障服務（日期均以購買之日起計算）：

❶ **免費換新:**購買7天内，提供免費換新；

❷ **免費維修:**購買6个月内，提供免費維修。

產品信息

產品型號	秋日庭院
性能特點	超聲波霧化
水箱容量	140ml
產品尺寸	125*125*124mm
淨　重	約340g
材　質	外罩：布藝（無縫布） 底座：ABS電
輸入電壓	5V⎓2A
定時模式	常開/1H/3H/5H
燈光模式	無極調光/安睡燈
出霧模式	常開/間歇出霧
執行標準編號	GB/T 4706.1-2024；GB/T 4706.48
製造商	寧波摩昕電子科技有限公司
地　址	寧波市江北區林沐路168號2號樓
責任承銷商	香港荒野香氣有限公司
责任承銷商地址	香港中環德輔道中107-111號余崇本行1
服務電話	+852-6064 8573

© 本產品已申請中國專利 中國外觀設計專利號：ZL 2025 3 06296

*本說明書將根據產品實際情況改進定期更新，同期發售版本有可能不同，

鍍
-2024
5樓1505室

65.8
請以最新版本為準。

CE

生命應該浪費在美好的事物上

May the force of plant be with you

ESTD 2013

Please read this manual before you use

Parts list

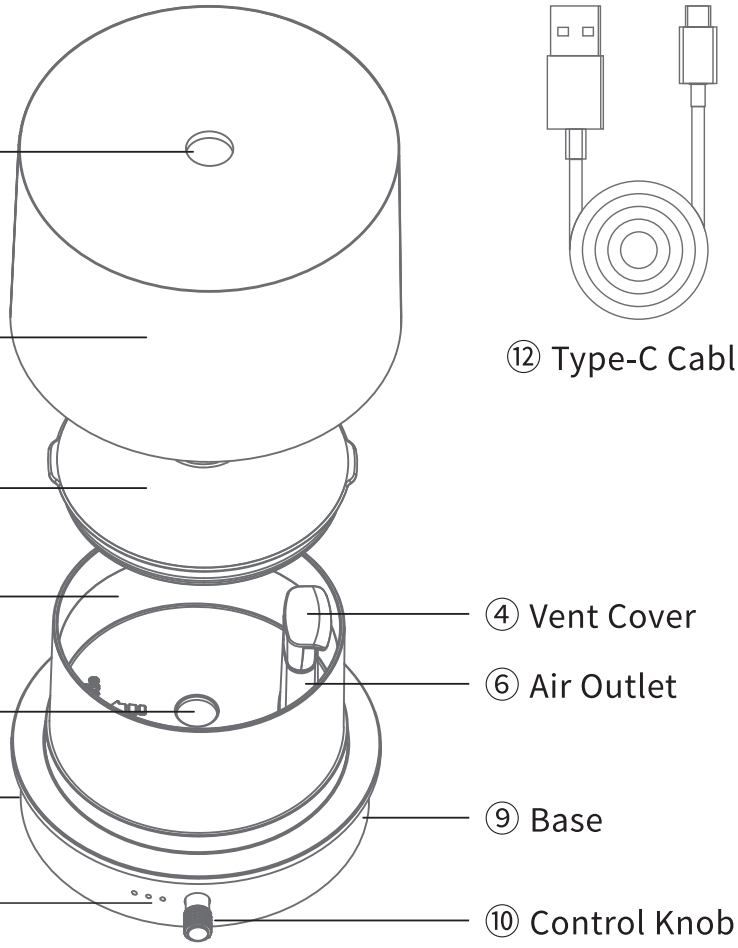

How to use



01

Connect the T
and a USB ou

*Power plug not

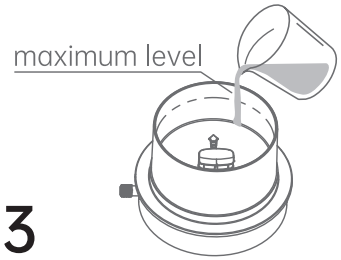

03

Add clean water, don't exceed maximum level*

*Don't pour water into air inlet to avoid affecting air circulation.



05

Put the inner li
press the contr

ype-C cable to the device
tlet topower it on

included

02

Remove the outer cover and inner lid





04

Add 5-8 drops of essential oil*

*Recommend Dr. Wong® essential oil.

id and outer cover back on and
rol knob to select working mode

Control Knob Guide



Mist & Timing set

1st press Contiunal Misting	☀ ☀ ☀
2nd press Misting - 1h	☀ ○ ○
3nd press Misting - 3h	○ ☀ ○
4nd press Misting - 5h	○ ○ ☀
5nd press Mist Off	○ ○ ○

Press 2 secs Flash
Interval Misting[1]

Light Control

Rotate clockwise ON / Brighter	ON
Rotate counterclockwise Weaker / OFF	OFF
Press & rotate Sleep Light ON/OFF[2] Indicator flashes in sequence	

[2] The device has two mist modes:Continual Misting and Interval Misting(30s ON / 30s OFF).

Press the knob for 2s (indicator blinks) to switch between above two modes. Misting mode can be switched at any time without change to the set timing.

[2] After activation,the Sleep Light will auto-off after 30min. Activate: Press knob + rotate (CW or CCW) → 3 lights flash, then off.

Exit the sleep light: Press knob + rotate (CW or CCW) → Sleep Light exits immediately.

Cautions

○ If the water level is too low, the diffuser will auto shut off, and both mist and light will stop earlier than the preset time.

○ The mist function will not operate if the water tank is empty.

○ With the same amount of water, water temperature, room temperature, and humidity may slightly affect the misting duration.

○ At the beginning of use, the mist output may vary depending on water temperaturu and quality.

○ The aroma intensity may differ based on essential oil type, temperature, humidity, and diffusion area.

○ Never tilt the device toward the air inlet.



Cleaning & Maintenance

Clean the diffuser every 2 weeks or as needed.

○ Use a cotton swab or soft damp cloth to gently wipe the atomizing plate at the bottom of the tank to remove the tank to remove.

○ Do not use sharp objects or apply excessive force, as this may affect misting performance.

○ Always unplug before cleaning. Empty and dry the tank when not in use.

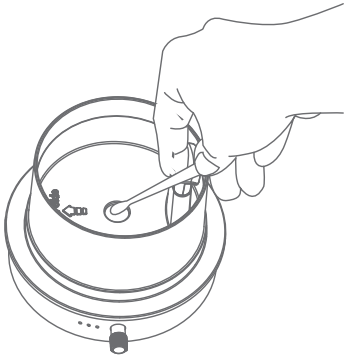

⚠ Water Ingress

If water enters the device from the ai please follow these steps:

1. Unplug the power cord.

2.Empty the tank completely. Do not pour fro

3.Tilt the device toward the drain hole to drai

4.Place in a dry area and air-dry for 24 hours.

To prevent water ingress:

○ Use a cup to add water.

○ Do not shake the device after filling.

○ Avoid moving the device once filled.

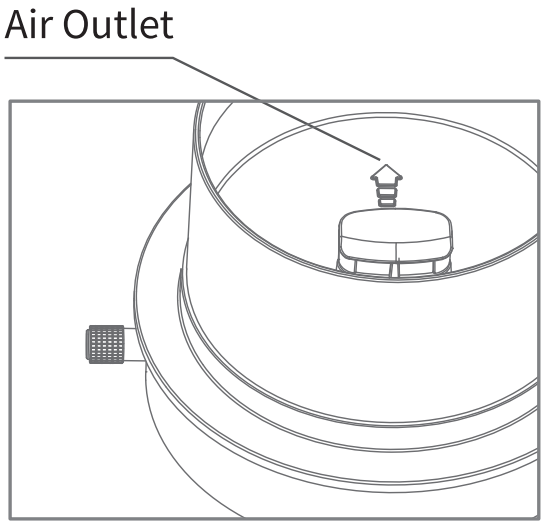

r outlet (e.g. product tipped over),

m the air outlet side.

n water from the base.

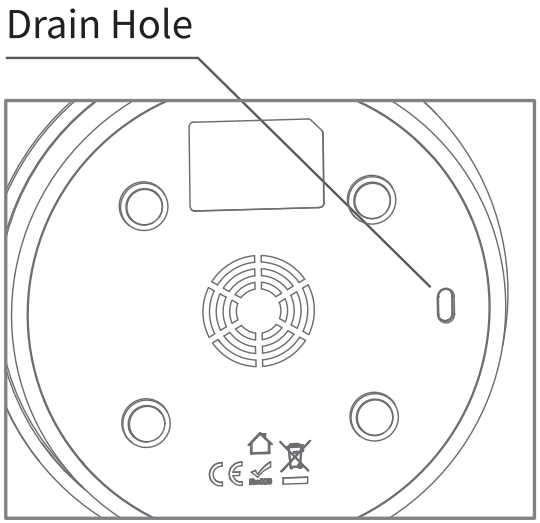

⚠ Notice

○ Do not twist or pull the power cord to avoid damage or fire risk.

○ Device auto-shuts off with lights off when the tank is empty.

○ Unplug immediately if abnormal smell, noise, or overheating occurs.

○ Do not use water above 55°C / 131°F.

○ Do not move, shake, or tilt the device during operation.

○ Use only pure essential oils; avoid fragrance, fragrance oil, and perfume into this device, never use carrier oils or essential device, never use carrier oils or essential.

○ Unplug when not in use. After long use, let rest 1h before reuse.

○ Place on a flat, stable surface. Avoid cloth or soft pads to prevent lint from entering mist output.

○ Keep out of reach of children and pets.

○ Keep away from heat, water, flames, air conditioners, and direct sunlight.

○ In case of malfunction, don't disassemble or repair the device by yourself, please contact us.

Q&A

Common problems	Reason Analysis	Solution
No electricity	Power adapter is not connected properly	Correctly connect the power adapter
	Knob not pressed	Press the knob
Power on, but no mist	Insufficient water	Fill the water tank (below MAX water level)
Enough water , but little or no mist	Ultrasonic atomizer is clogged	Clean the atomizer
	Too much water	Dump the excess water until water level is below MAX line
	The air outlet may be blocked	Remove any blockages

Warranty

If the product fails to work properly (not due to false action of user) **, the following warranty will be provided** (dated from the day of purchase)**:**

❶ Free replacement: Free replacement within 7 days.

❷ Free maintenance: Free maintenance within 6 months.

Specifications

Product Name	Aroma Diffuser - Courtyard in Fall
Feature	Ultrasonic Atomization
Tank Volum	140ml
Dimensions	125 × 125 × 124 mm
Net Weight	Approx.340g
Material	Outer cover: Fabric (seamless) Base: ABS plating
Input Voltage	5V⎓2A
Timer Modes	Contiunal / 1H / 3H / 5H Misting
Light Modes	Stepless dimming / Sleep Light
Mist Modes	Contiunal / Interval Misting
Standard	GB/T 4706.1-2024； GB/T 4706.48-2024
Manufacturer	Ningbo Mozzin Electronic Technology Co., Ltd.
Address	Building 2, No.168 Linmu Road, Jiangbei District, Ningbo,Ch
Authorized Dealer	Wilderness Aromatics (Hong Kong) Co., Limited
Address of Authorized Dealer	Room 1505,15/F., Yu Sung Boon Building 107-111 Des Voeux Central, Central, Hong Kong
Service phone	+852-6064 8573

© **This product has applied for a Chinese patent.** Chinese design patent number： ZL 2025 3 0629665.8

*This manual may be updated. Please refer to the latest version.

ina

Road

社交媒體 Social media

www.drwonglab.com

○ 中國港澳台及國際訪客

For visiters of China Hong kong, Macau, & Taiwan and international visiters

WhatsApp

Facebook

○ 中國大陸訪客

For visiters of mainland China

微信公眾號
Wechat

小紅書
Red

天貓店
Tmall

天貓香薰店
Tmall

野山空行線香鋪
Tmall

線下店鋪 Boutique shops

華 南 South China	深 圳 Shenzhen	華僑城創意園店：南山區華僑城創意園北區A5-132 A5-132, OCT-LOFT North, Nanshan, Shenzhen
		萬象前海店：南山區萬象前海L305A L305A, Qianhai Mixc, Nanshan, Shenzhen
		南海意庫店：南山區南海意庫3棟114號 114, Block3, NH ECOOL, SheKou, NanShan District, Shenzhen
	香 港 Hong Kong	銅鑼灣誠品店：港島銅鑼灣希慎廣場L802 L802, Hysan Place, Causeway Bay, Hong Kong
華 東 East China	上 海 Shanghai	華潤時代廣場店：浦東新區華潤時代廣場L106 L106, Times Square, Pudong, Shanghai
	蘇 州 Suzhou	蘇州誠品店：蘇州工業園區誠品生活L245 L245, The eslite spectrum, Suzhou Industrial Park, Suzhou
	寧 波 Ningbo	萬象城店：江北區萬象城L236 L236, MIxc, Jiangbei District, Ningbo
華 北 North China	北 京 Beijing	嘉里中心店：朝陽區北京嘉里中心L104 L104, Kerry Centre, Chaoyang, Beijing

* 版本更新截止2026年10月
Updated in October 2026

深圳市下一站生活用品有限公司 出品
Shenzhen Next Station Personal Care Product Co., Ltd